

IMPORTANT


The FC3 is supplied configured for 400V 3 phase and neutral operation.

To convert it to 230V single phase, set the brass jumpers inside the terminal box AND link the inlet terminals L3, L2 and N as per the diagram above.

ACCESSORIES


Optional

time switch

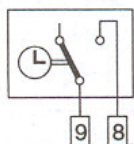


Optional

external switch

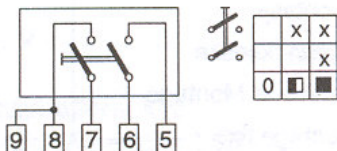

Optional

external thermostat

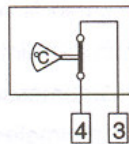

Wiring diagram for FC3 3kw 230V/400V Fan heater.